 



For 4330E 4333E 4335E Programming

Instruction

 
TM

4330A 4333A 4335A

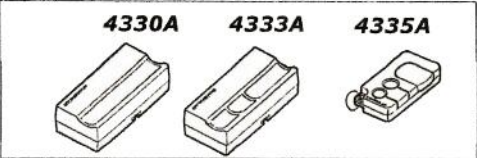





DO NOT operate your garage door unless it is in full view and clear of obstruction and is properly adjusted. No one should enter or leave the garage whilst the door is in motion. Do not allow children to operate push button(s) or remote. Do not allow children to play near door.

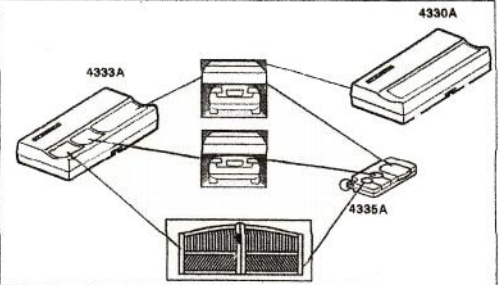

433MHz Billion Code Remote Controls


- 4333A 3-channel billion code remote control
- 4335A 3-channel billion code mini remote control
- 4330A Single-channel Billion code remote control

  Suits third party products: CAD4, CAD5, FAM4, FAM5, EL4, EL5, CAD R, CAD P, FAM R, EL R, CAD P DIAMOND, CAD P DIAMOND WQ, CAD DIAMOND PD.


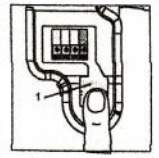



CAD5 & P

 CAD4




CAD Diamond series

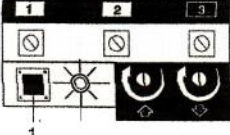  CHOOSING A BUTTON

 You can use any of the three buttons to activate your door. If you have multiple doors or an automated gate you may use one of the other two buttons to activate it, provided you have a compatible receiver. For further details please refer to our web page.

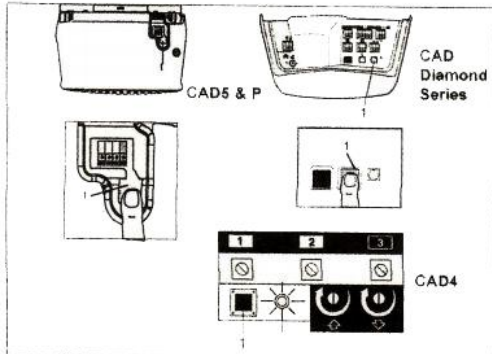

ADDING REMOTES

1. Press and hold the selected remote push button you wish to open the door.
2. Press and release the orange "Learn" button (1) on the opener panel. The opener light will flash once. Release the remote push button. If no light bulb is installed, two clicks will be heard.

If you release the remote control push button before the opener light flashes, the opener has not accepted the code.

To Erase All Programmed Remotes/Codes

Press and hold the "Learn" button (1) on the opener panel until the indicator light turns off (about 6-10 seconds).

Note: This procedure erases all codes from the operators memory.

To add or re-program valid remotes into your opener, follow the procedure laid out in "ADDING REMOTES".

NOTE: FOR MODELS NOT DETAILED ABOVE CONSULT OWNER'S MANUAL.

Replacing Batteries

Model 4333A and 4330A:

Insert batteries 10A20 (CR2032) positive side **up**.

Model 4335A: Insert batteries 10A19 (CR2016) positive side **down**.



To replace cover, snap shut along both sides. The lithium batteries should produce power for up to 5 years. To replace batteries, use the visor clip or screwdriver blade to pry open the case, as shown ("Open" location is stamped on back.)

Australia Pty Ltd
PO Box 1446
Lane Cove NSW 1595

New Zealand Ltd
P.O. Box 100-221
North Shore 0745


N2966