

SELECTING A CODE

You may set your transmitter to any code you desire but be sure that the code you set matches the code that has been set on your radio receiver. The digital code is determined by the positions of the 10 small switches numbered 1 through 10 located in the receiver and transmitter. Any combination of ON (CLOSED) or OFF (OPEN) positions can be selected by using a small screwdriver or ball point pen. (NOTE: The switches are in the "On" position when the side next to the number is pressed in.) In setting your own personal code we strongly urge that several coding schemes be avoided: ALL ON; ALL OFF; 2,4,6,8,10 ON; 1,3,5,7,9 ON. These positions are similar to our or other manufacturer's test positions, or are frequently used. Once the code has been set, check the operation and replace the hatches.

